



MU22CV	MAY 1998
MU22CVS	HTN9025
MV11C	HMN9038
MV24CVS	HLN9897
MV24CVST	HLN9898

Spirit M-Series 2-Way Radios



**CUSTOMER
SUPPORT
INFORMATION**

Order toll-free in the U.S.: Call 877-877-BBOX (outside U.S. call 724-746-5500)
FREE technical support 24 hours a day, 7 days a week: Call 724-746-5500 or fax 724-746-0746
Mailing address: **Black Box Corporation**, 1000 Park Drive, Lawrence, PA 15055-1018
Web site: www.blackbox.com • E-mail: info@blackbox.com

TRADEMARKS USED IN THIS MANUAL

Motorola is a registered trademark of Motorola.

Any other trademarks mentioned in this manual are acknowledged to be the property of the trademark owners.

Copyright Information

The Motorola® products described in this manual may include copyrighted Motorola programs stored in semiconductor memories or other media. Laws in the United States and other countries preserve for Motorola, certain exclusive rights for copyrighted computer programs, including the exclusive right to copy or reproduce in any form, the copyrighted Motorola programs. Accordingly, any copyrighted Motorola computer programs contained in the Motorola products described in this manual may not be copied or reproduced in any manner without the express written permission of Motorola. Furthermore, the purchase of Motorola products shall not be deemed to grant either directly or by implication, estoppel, or otherwise, any license under the copyrights, patents, or patent applications of Motorola, except for the normal non-exclusive royalty-free license to use that arises by operation of law in the sale of a product.

Contents

Chapter	Page
1. Specifications	8
2. Getting Started	10
2.1 Package Contents	10
2.2 Examining the Radio	11
2.3 Attaching or Removing the Antenna	12
2.4 Attaching or Removing the Belt Clip	13
2.5 Ni-Cad Batteries	14
2.6 Low-Battery Alert	14
2.7 Installing and Removing Batteries	15
2.8 Charging the Battery with the Charger Adapter	16
2.9 Charging the Battery with the 10-Hour Desktop Charger	18
3. Programming	20
3.1 Understanding Frequencies and Codes	20
3.1.1 Frequencies	20
3.1.2 Interference Eliminator Codes	20
3.2 To Change Frequency and Code Settings	21
3.2.1 1-Channel Models	21
3.2.2 2- and 4-Channel Models	22
4. Operation	24
4.1 Turning the Radio On or Off	24
4.2 Adjust the Volume	24
4.3 Sending or Receiving Messages	24
4.4 Time-Out Timer	24
4.5 Scan	25
4.6 Built-In VOX	26
5. Troubleshooting	27
5.1 Radio Care	28
5.2 Talk Range	28
Appendix: Frequency and Code Tables	29

FCC Licensing Information

Your radio operates on FM radio communication frequencies and is subject to the Rules and Regulations of the Federal Communications Commission (FCC). The FCC requires that all operators using Private Land Mobile frequencies obtain a radio license before operating their equipment. Application for your FCC license is made on FCC Form 600 and schedules D, E, and G.

To have the forms faxed to you by the FCC, call the FCC Fax-On-Demand system at 1-202-418-0177 from your fax machine and request document 000600 for all forms and instructions.

To have the forms mailed to you, call the FCC forms hotline at 1-800-418-3676. For questions concerning the license application, contact the FCC at 1-888-225-5322.

Before filling out your application, you must decide which frequency or frequencies you can operate on. See the frequency tables in the **Appendix**.

For questions on determining your radio frequency, call Technical Support.

Recycling of Nickel-Cadmium Batteries

Nickel-cadmium (Ni-Cad) rechargeable batteries can be recycled. However, recycling facilities may not be available in all areas. Under various U.S. state laws, Ni-Cad batteries must be recycled or disposed of properly and cannot be disposed of in landfills or incinerators.

Many retailers participate in the nation-wide Rechargeable Battery Recycling Corporation (RBRC) program for nickel-cadmium battery collection and recycling. For the name of the retailer nearest your location, call 1-800-8-BATTERY. This number also provides access to other useful information for consumers, businesses, and governmental agencies concerning recycling options.

Safety Information

Exposure to Radio Frequency Energy

The design of your radio, which generates radio frequency (RF) electromagnetic energy, complies with the following national and international standards and guidelines.

- FCC Report and Order FCC 96-326 (August, 1996)
- American National Standards Institute (C95-1-1992)
- National Council on Radiation Protection and Measurements (NCRP-1986)
- International Commission on Non-Ionizing Radiation Protection (ICNRP-1986)
- CENELEC

Env. 50166-11995E—Human exposure to Electromagnetic Fields Low Frequency (0 Hz to 10 kHz)

Env. 50166-21995E—Human exposure to Electromagnetic Fields High Frequency (10 kHz to 300 GHz)

Proceedings of SC211/8 1996—Safety Considerations for Human Exposure to EME's from Mobile Telecommunications Equipment (MTE) in the Frequency Range 30 MHz to 6 GHz (EME-Electromagnetic Fields).

To assure optimal radio performance and to ensure that exposure to RF energy is within the guidelines in the above standards, observe these procedures:

PORTABLE TWO-WAY RADIOS

- For handheld operation, the radio should be held in a vertical position with the microphone one to two inches away from the mouth, and the antenna should be kept one to two inches from the head or body when transmitting.
- For body-worn operation, the antenna should be kept at least one inch from the body when transmitting.

VEHICLE-INSTALLED MOBILE TWO-WAY RADIOS

- Properly install antennas externally on the vehicle, following recommended installation procedures.
- Transmit only when people inside or outside the vehicle are at least 1 to 3 feet away from the properly installed, externally mounted antenna; distance guidelines for the different power levels are summarized in the table below:

Rated power of vehicle-mounted radio	Min. distance of people from transmitting antenna
7 to 15 watts	1 foot
16 to 50 watts	2 feet
more than 50 watts	3 feet

Electromagnetic Interference/Compatibility

Nearly every electronic device is susceptible to electromagnetic interference (EMI) if inadequately shielded, designed, or otherwise configured for electromagnetic compatibility.

- Turn your radio off in any facilities where posted notices instruct you to do so. Hospitals or health-care facilities may be using equipment that could be sensitive to external RF energy.
- Turn your radio off when on board aircraft when instructed to do so. Any use of the radio must be in accordance with airline regulations or crew instructions.

WARNING!

Potentially explosive atmospheres:

Turn your radio off when in any area with a potentially explosive atmosphere. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death.

Do not replace or charge batteries in a hazardous atmosphere. Contact sparking may occur while installing or removing batteries and cause an explosion.

Areas with potentially explosive atmospheres are often, but not always, clearly marked. They include fueling areas such as below deck on boats, fuel or chemical transfer or storage facilities; areas where the air contains chemicals or particles, such as grain, dust, or metal powders; and any other area where you would normally be advised to turn off your vehicle engine.

Blasting caps and areas:

To avoid possible interference with blasting operations, turn your radio off near electrical blasting caps or in a “blasting area” or in areas posted: “Turn off two-way radio.” Obey all signs and instructions.

For vehicles with an air bag:

An air bag inflates with great force. Do not place objects, including portable or mobile two-way radios, in the area over the air bag or in the air bag deployment area. If improperly installed or placed wireless equipment is in the air bag deployment area and the air bag inflates, serious injury could result.

CAUTION

Antennas:

Do not use a radio with a damaged antenna. If a damaged antenna comes into contact with the skin, a minor burn may result.

Batteries:

All batteries can cause property damage, injury, or burns if a conductive material such as jewelry, keys or beaded chains touches exposed terminals. The material may complete an electrical circuit (short circuit) and become quite hot. Exercise care in handling any charged battery, particularly when placing it inside a pocket, purse or other container with metal objects.

Chargers and power cord:

To reduce the risk of damage to electric plug and cord, pull by the plug rather than the cord when disconnecting the charger.

Make sure the cord is located so that it will not be stepped on, tripped over, or otherwise subjected to damage or stress.

Do not operate the charger with a damaged cord or plug; replace them immediately. Do not operate charger if it has received a sharp blow, been dropped, or otherwise been damaged in any way.

Do not expose chargers to rain or snow.

An extension cord should not be used unless absolutely necessary. Use of an improper extension cord may result in a fire or electric shock. However, if an extension cord must be used, make sure:

- that pins and plug of extension cord are the same number, size, and shape as those on the plug of the charger.
- that the extension cord is properly wired and in good condition.
- the cord size is 18 AWG for lengths of up to 100 feet, and 16 AWG for lengths up to 150 feet.
- that you do not disassemble the charger. Incorrect reassembly can result in electric shock or fire.
- to reduce the risk of injury by charging only Motorola Ni-Cad rechargeable batteries. Other types of batteries may burst, causing personal injury and damage.
- to unplug the charger from the outlet before cleaning. This reduces the risk of electric shock. Turning off controls does NOT reduce this risk.

Use of attachments other than those mentioned in this guide can result in a risk of fire, electric shock, or injury to personnel.

1. Specifications


Range —	MV11C: In buildings, up to 150,000 square feet (13,935 square m) or 8 floors. Outdoors, up to 4 miles (6.4 km) in flat, open areas with no obstructions, or up to 2 miles (3.2 km) around residential buildings. MU22CV, MU22CVS: In buildings, up to 250,000 square feet (23,225 square m) or 20 floors. Outdoors, up to 5 miles (8 km) in flat, open areas with no obstructions, or up to 2 miles (3.2 km) around residential buildings. MV24CVS, MV24CVST: In buildings, up to 180,000 square feet (16,722 square m) or 10 floors. Outdoors, up to 5 miles (8 km) in flat, open areas with no obstructions, or up to 2.5 miles (4 km) around residential buildings. (Note: Range is reduced around hills or dense foliage.)
Band —	MU22CV, MU22CVS: UHF; MV11C, MV24CVS, MV24CVST: VHF
Interference Protection —	An Interference Eliminator is standard on all radio models
Channel Spacing —	25 kHz
Channels —	MV11C: 1; MU22CV, MU22CVS: 2; MV24CVS, MV24CVST: 4
Selectable Frequencies —	MU22CV, MU22CVS: 464.500 MHz (Brown), 464.550 MHz (Yellow), 467.7625 MHz (J), 467.8125 MHz (K), 467.850 MHz (Silver star), 467.875 MHz (Gold star), 467.900 MHz (Red star), 467.925 MHz (Blue star); MV24CVS, MV24CVST, and MV11C: 151.6250 (Red), 151.9550 (Purple), 154.5700 (Blue), 154.6000 (Green)
Accessory Jack —	For use with charger adapter and all audio accessories
Power Supply —	Rechargeable Ni-Cd battery

Battery Life —	MV11C: Up to 10 hours per battery charge; All other radio models: Up to 8 hours per battery charge; All models: 1- to 2-year life with normal use
Power Output —	MV11C: 1 watt; All other radio models: 2 watts
Size —	4.5"H x 2.5"W x 1.2"D (11.4 x 6.4 x 3 cm); Height with antenna: 10" (25.4 cm) for MV24CVS, MV24CVST, and MV11C; 8" (20.3 cm) for MU22CV, MU22CVS
Weight —	0.7 lb. (0.3 kg)

2. Getting Started

2.1 Package Contents

1. Radio (MV11C shown below)
2. Antenna (UHF shown)
3. Belt clip
4. Ni-Cad battery pack
5. 10-hour charger adapter
6. 10-hour desktop charger (included with the MV24CVST only)

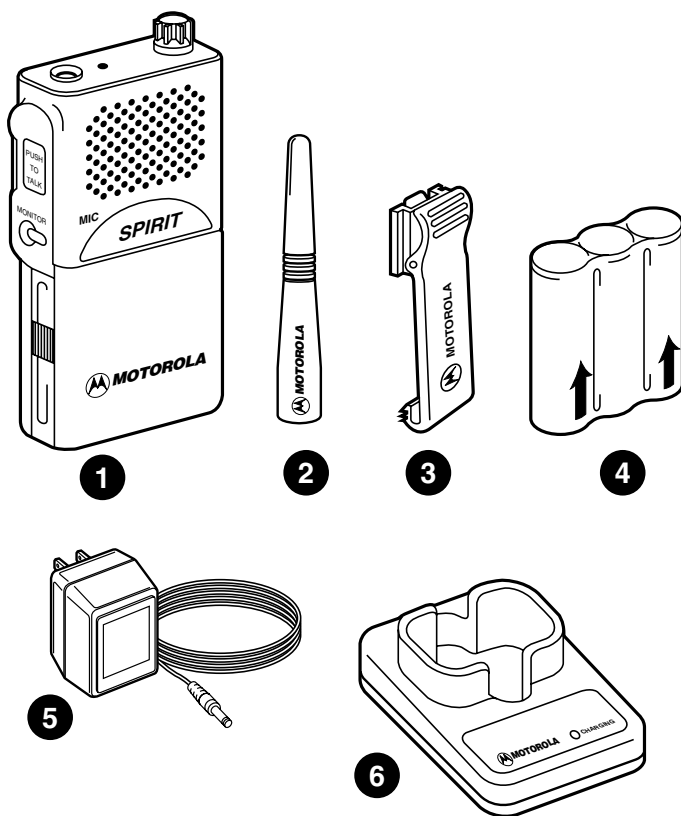


2.2 Examining the Radio

1. Antenna
2. Push-to-talk button
3. Monitor button
4. Microphone
5. Battery cover
6. Battery cover latches
7. Speaker
8. On-Off/volume knob
9. Transmit light
10. Accessory jack
11. Accessory jack cover

NOTE

Multi-channel models have a channel selector knob on top of the radio.

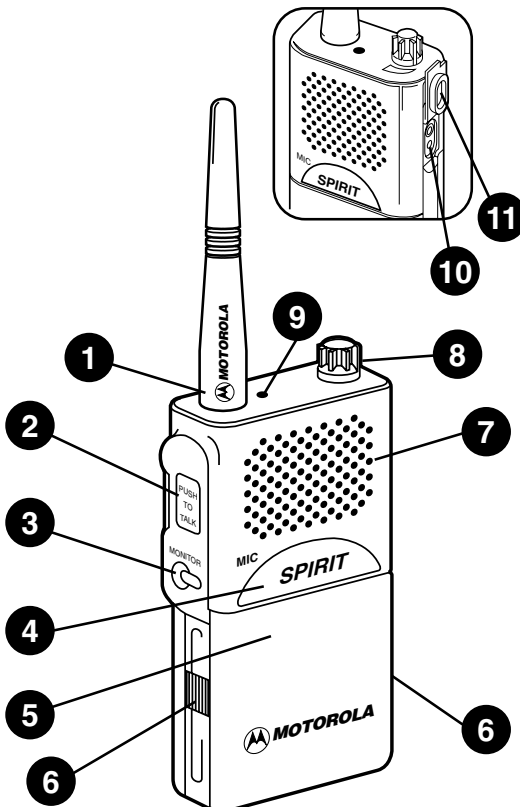


2.3 Attaching or Removing the Antenna

To attach the antenna, rotate the antenna clockwise onto the top of the radio until it's held tightly in place. See the illustration below.



NOTE

The antenna should always be installed when operating the radio. Operating the radio without an antenna greatly reduces the range of the radio.

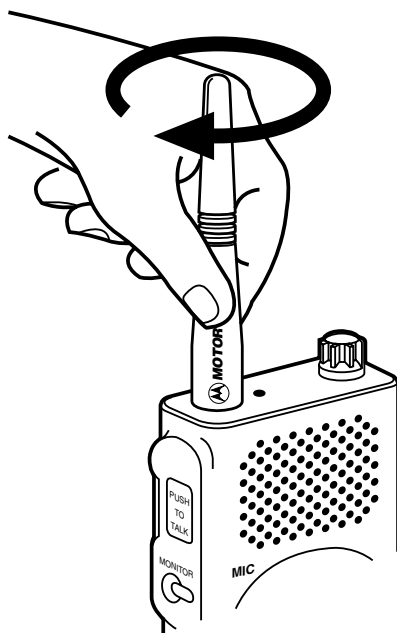

2.4 Attaching or Removing the Belt Clip

1. Align the belt clip to the mounting rails on the back of the radio (see the first illustration below).
2. Push the belt clip down until it clicks into place.
3. To remove the belt clip, pull the tab on the belt clip away from the radio to release (see the second illustration below).
4. Slide the belt clip up and off.

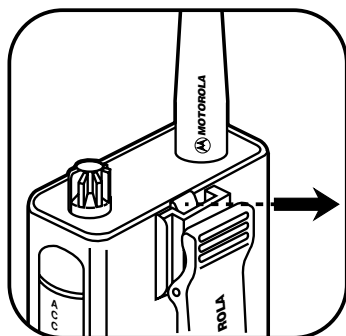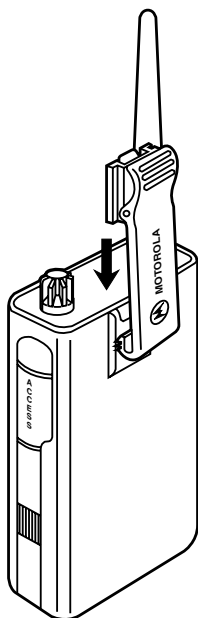

2.5 Ni-Cad Batteries

Since the Ni-Cad battery ships uncharged, it must be fully charged for 16 hours before use (for the first charge only). We recommend using only Motorola batteries and chargers with the radio.

The Ni-Cad rechargeable battery pack will provide approximately 8 hours of operation for a 2-watt radio and 10 hours of operation for a 1-watt radio with normal use (5% sending messages, 5% receiving messages, and 90% in standby mode).

2.6 Low-Battery Alert

When the battery is low, the radio will beep:

- 3 to 4 seconds after turning power on,
- every 10 minutes in standby mode, and
- after release of the push-to-talk button.

Recharge the battery pack immediately to avoid interrupted use.

NOTE



Remove the battery pack before storing your radio for extended periods. Batteries may corrode over time if left in the radio and can cause permanent damage to your radio.

2.7 Installing and Removing Batteries

NOTE

The radio must be off before installing or removing the battery.


1. Push back both battery cover latches until you see the orange tabs.
2. Slide the battery cover down and lift to remove (see the first illustration below). To replace or install the battery, insert the battery pack with the arrows pointing toward the top of the radio (see the second illustration below).

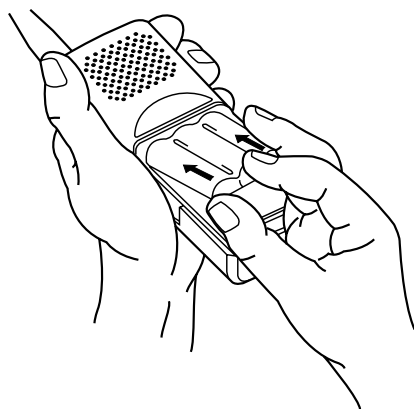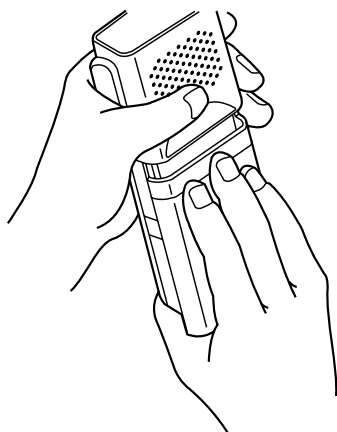

3. Replace the battery cover and lock latches.
4. To remove the battery, first remove the cover. Turn the radio over and tap the battery end of the radio against the palm of your hand. The battery will drop into your hand (see the illustration below).

NOTE

Do not remove the plastic wrap from the battery pack. This will permanently damage the battery.

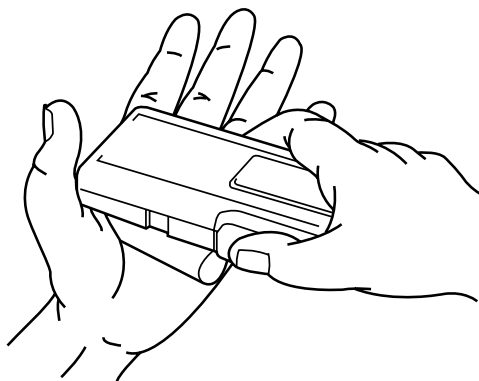

2.8 Charging the Battery with the Charger Adapter

NOTES

To reduce the risk of injury, charge only Motorola nickel-cadmium rechargeable battery packs. Other types of batteries can burst, causing personal injury and damage.

For optimum battery life, the battery should not be left charging for prolonged periods after reaching full charge. Charging the battery over the weekend is acceptable.

Do not transmit while the radio is charging. Transmitting while the radio is charging can cause the radio transmitter or the charger to operate improperly.

Turn the radio off when it's charging. If the radio is on while it's charging, at least twice as much time is required to charge the battery.

WARNING!

Do not expose chargers to rain or snow.

Use of a non-Motorola attachment can result in a risk of fire, electric shock, or personal injury.

To reduce the risk of damage to the electric plug and cord, pull the plug rather than the cord when disconnecting the charger.

Make sure the cord is located so that it will not be stepped on, tripped over, or otherwise subjected to damage or stress.


An extension cord should not be used unless absolutely necessary. Use of an improper extension cord could result in a fire or electric shock. However, if an extension cord must be used, make sure that a) the pins and the plug of the extension cord are the same number, size, and shape as those on the plug of the charger, b) the extension cord is properly wired and in good condition, and c) the cord size is 18 AWG for lengths up to 100 feet and 16 AWG for lengths up to 150 feet.

Do not operate the charger with a damaged cord or plug. Do not operate the charger if it has received a sharp blow, been dropped, or otherwise been damaged in any way.

Do not disassemble the charger. Incorrect reassembly can result in electric shock or fire. Call Black Box if it needs to be repaired.

To reduce the risk of electric shock, unplug the charger from the outlet before attempting any maintenance or cleaning. Turning off controls does not reduce this risk.

1. Turn the radio off.
2. Lift the accessory cover and plug the charger adapter firmly into the small jack (lower hole). See the illustration below.

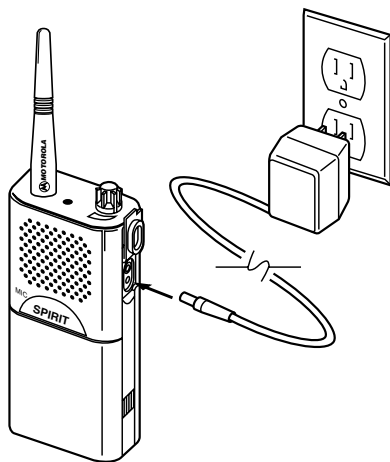

3. Plug the charger into an electric outlet. The light on the charger will glow continuously if charging properly.
4. Allow 10 hours for the battery to fully charge.

2.9 Charging the Battery with the 10-Hour Desktop Charger (included with the MV24CVST)

WARNING!

Do not expose chargers to rain or snow.

Use of a non-Motorola attachment can result in a risk of fire, electric shock, or personal injury.

To reduce the risk of damage to the electric plug and cord, pull the plug rather than the cord when disconnecting the charger.

Make sure the cord is located so that it will not be stepped on, tripped over, or otherwise subjected to damage or stress.

An extension cord should not be used unless absolutely necessary. Use of an improper extension cord could result in a fire or electric shock. However, if an extension cord must be used, make sure that a) the pins and the plug of the extension cord are the same number, size, and shape as those on the plug of the charger, b) the extension cord is properly wired and in good condition, and c) the cord size is 18 AWG for lengths up to 100 feet and 16 AWG for lengths up to 150 feet.


Do not operate the charger with a damaged cord or plug. Do not operate the charger if it has received a sharp blow, been dropped, or otherwise been damaged in any way.

Do not disassemble the charger. Incorrect reassembly can result in electric shock or fire. Call Black Box if it needs to be repaired.

To reduce the risk of electric shock, unplug the charger from the outlet before attempting any maintenance or cleaning. Turning off controls does not reduce this risk.

To reduce the risk of injury, charge only Motorola nickel-cadmium rechargeable battery packs. Other types of batteries can burst, causing personal injury and damage.

1. Connect the desktop charger and charger adapter (see the illustration below).

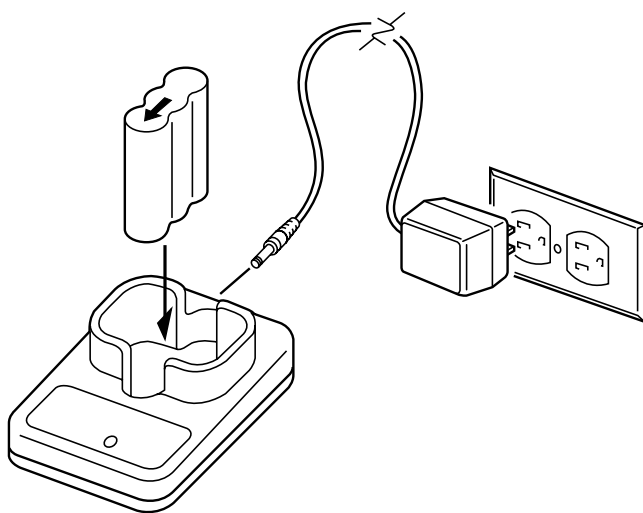

2. Charge the battery while inside the radio by placing the radio in the desktop charger with the radio facing toward you.

You can also charge the battery by removing the battery from the radio and placing it in the desktop charger. The silver contacts must face down, and the arrow must point toward the front of the charger.

3. The light on top of the desktop charger will glow continuously when the radio (or battery) is inserted. If the light does not come on, make sure the radio (or battery) is properly inserted and check the battery/charger contacts to be sure they are clean. The light will continue to glow until the radio (or battery) is removed from the desktop charger.
4. Allow 10 hours for the battery to fully charge.

3. Programming

3.1 Understanding Frequencies and Codes

3.1.1 FREQUENCIES

Your radio operates on group of frequencies (see the **Appendix** for a complete listing). You access frequency or frequencies through radio channel(s). You can operate on any of your radio's frequencies, but each must be licensed through the FCC (see page 3).

To understand the difference between frequencies and channels, think of channels as pre-set buttons on your car stereo and the frequencies as the many radio stations available. You can select and save different stations (frequencies) to pre-set buttons (channels) for easy access.

3.1.2 INTERFERENCE ELIMINATOR CODES

Codes filter out static, noise, and unwanted chatter on radio channels (see the **Appendix** for a complete listing). When you operate on a frequency with a code set, you block out most interference on the frequency. This allows you to communicate with less interference than when operating without a code. Remember, since radio frequencies can be monitored, codes will not make your conversations private.

NOTE

For compatibility with radios that do not have codes, the radio can be set to Code "Off" in the programming mode. See the following instructions.

NOTE

To talk to others in your group, all radios must be set to the same channel and code.

There are settings programmed into your radio for frequencies and codes. If it is necessary to confirm settings or to change them for licensing purposes, the radio will audibly guide you through a series of programming steps.

3.2 To Change Frequency and Code Settings


3.2.1 1-CHANNEL MODELS

1. Hold the Push-To-Talk button down while turning the radio on (turning the On/Off Volume knob at the top of the radio). The radio announces the current frequency setting. For example, it might say, “Frequency one.”
2. Press the Push-To-Talk button to scroll through frequencies. The radio announces each frequency as you scroll. For example, it might say, “Two...three....”
3. Release the Push-To-Talk when you’ve reached the desired frequency.
4. Press the Monitor button to select and save the new frequency setting. The radio announces the current code setting. For example, it might say, “Code two nine.”
5. Press the Push-To-Talk button to scroll through the codes. The radio announces each code as you scroll. For example, it might say, “three zero...three one...”
6. Release the Push-To-Talk button when you’ve reached the desired code.
7. Press the Monitor button to select and save the new code setting. The radio beeps to indicate that it has exited programming and is ready for use.

SPIRIT M-SERIES 2-WAY RADIOS

3.2.2 2- AND 4-CHANNEL MODELS

1. Turn the Channel Selector knob to Channel 1 (see the illustration below).

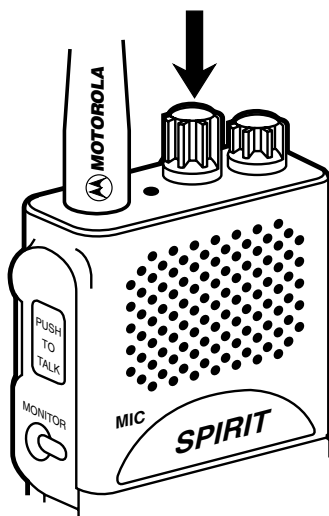

2. Hold the Push-To-Talk button down while turning the radio on (turning the On/Off Volume knob at the top of the radio). The radio announces the current frequency setting for that channel. For example, it might say, "Frequency one."
3. Press the Push-To-Talk button to scroll through the frequencies. The radio announces each frequency as you scroll. For example, it might say, "Two...three..."
4. Release the Push-To-Talk when you've reached the desired frequency.
5. Turn the Channel Selector knob to channel 2 and repeat steps 3 and 4. For the 4-channel models, repeat to set channels 3 and 4.
6. Press the Monitor button to select and save the new frequency setting. The radio announces the current code setting. For example, it might say, "Code two nine."
7. Press the Push-To-Talk button to scroll through the codes. The radio announces each code as you scroll. For example, it might say, "three zero...three one..."

8. Release the Push-To-Talk button when you've reached the desired code.
9. Press the Monitor button to select and save the new code setting. The radio beeps to indicate that it has exited programming and is ready for use.

NOTES

To use this radio with other Motorola radios, see the tables in the Appendix.

Code numbers with two digits (10-38) will be announced "one zero" to "three eight."

You can only scroll forward when selecting frequency or code.

When you are changing frequency or code, you cannot send messages.

The code setting applies to all channels. You cannot select a different code for each channel.

For radio models with the scan feature: The radio will sound a warning tone if you accidentally switch to the "s" position while programming. See Chapter 4 for more information.

4. Operation

4.1 Turning the Radio On or Off

Turn the On-Off/Volume knob clockwise. You'll hear a beep and see the Transmit Light flash momentarily to indicate the radio is on. To turn the radio off, turn the On-Off/Volume knob counterclockwise. You will hear a click to indicate the radio is turned off.

4.2 Adjust the Volume

Hold the Monitor button down to listen to the audio level while rotating the On-Off/Volume knob. Rotate the knob clockwise to increase and counterclockwise to decrease volume.

4.3 Sending or Receiving Messages

Check the channel activity by pressing the Monitor button. You will hear static if the channel is clear to use. Do not transmit if someone is talking on the channel.

1. To send messages, press the Push-To-Talk speak into the radio. (To maximize clarity, hold the radio one to two inches from your mouth.)
2. The Transmit Light will glow continuously when sending messages.
3. To listen for messages, release the Push-To-Talk button.

4.4 Time-Out Timer

The Time-Out Timer feature prevents channel congestion and helps extend battery life. The radio will sound a warning tone if the Push-To-Talk button is pressed for 60 continuous seconds and will stop transmitting.

4.5 Scan (Optional)

Some radio models have the Scan feature. Scan allows you to monitor the radio's programmed channels and code. When the radio detects someone talking, it stops scanning and locks in on the active channel. It allows you to listen and talk back automatically to the person transmitting without having to switch channels.

NOTE

To communicate in scan, your radio must be set to the same frequency and code as the other radio(s) in your group.

To use the Scan feature:

1. Move the Channel Selector knob to the "s" position. The radio will scan the radio's programmed channels and code in sequential order.
2. When the radio detects someone talking, you will hear the message.
3. Press the Push-To-Talk button to talk back on the channel.

In Scan, you will always transmit back to the channel which last sent a message.

NOTE

In scan, after you receive a message, the radio will remain on that channel for three seconds before returning to scan mode.

If you set the Channel Selector knob to the "s" position (scan mode) and no activity is detected, you will transmit on channel 1 when you press the Push-To-Talk button.

4.6 Built-In VOX (Optional)

Some radio models have the built-in VOX (Voice Activated Transmission). This feature allows hands-free operation of your radio. The sound of your voice activates transmission when the radio is used with a Headset with Swivel Boom Microphone (part number HMN9038). The headset is sold separately.

To use the VOX feature:

1. Turn the radio off.
2. Open the Accessory jack cover and plug the headset's connector firmly into the jack.
3. Turn the radio on and lower the volume before wearing the headset. Press the monitor button while rotating the Volume knob to adjust the volume to a comfortable listening level.
4. To transmit, speak into the accessory microphone. To receive, stop talking. There will be a one-second delay between when you start or stop talking and radio transmission.

To exit the VOX feature:

1. Press the Push-To-Talk button once.
2. To transmit, press the Push-To-Talk button.
3. To receive messages, release the Push-To-Talk button.
4. To return to VOX mode, turn the radio off, then on again.

NOTE

The accessory jack cover is not detachable and should be closed when not in use.

5. Troubleshooting

Problem: Radio has no power.

Solution: Reposition or charge the battery pack.

Problem: Battery does not charge or last long enough.

Solution: If you're using the charger adapter, make sure the plug is firmly connected into the jack and the light on the adapter glows indicating correct charging status.

If the desktop charger is used, make sure the battery is positioned properly and the light on the tray is on.

The radio should be turned off when charging. Charge time will be longer if it is left on.

Heavy use may require a spare battery or recharging.

Problem: Message not transmitted.

Solution: Make sure the Push-To-Talk button is completely pressed and the Transmit Light is on while you talk.

Insert, reposition, or charge the battery pack.

Problem: Message not received.

Solution: Confirm that the radios are set on the same channel and interference-eliminator code settings. See **Chapter 3** and the **Appendix**.

Obstructions and operating indoors or in vehicles may interfere with communication. Change your location.

Check to make sure the radio is on and the volume is set to a comfortable listening level.

The code must be set to "OFF" on your radio to receive a message from a radio without code capability.

Make sure Push-To-Talk is not inadvertently being pressed on the receiving radio.

Problem: Hearing other conversations or noise on the radio.

Solution: Check that your interference eliminator code is set (active settings are 1 through 38).

Other users may be using channel-change code. If you are part of a group, change the code on all radios.

SPIRIT M-SERIES 2-WAY RADIOS

- Problem:** Limited talk range.
- Solution:** Steel/concrete structures, heavy foliage, and use in buildings and in vehicles will decrease range; check for clear line of sight to improve transmission.

Wearing the radio close to the body, such as in a pocket or on a belt, will decrease range. Change the location of the radio.

Radios are too far apart. Obstacles interfere with transmission. Talk range is up to 5 miles in clear unobstructed conditions. (See **Section 5.2** for more information on talk range.)

5.1 Radio Care

- To clean the radio housing, wipe with a soft cloth dampened with water.
- Don't use cleaners or solvents on the radio. They can harm the body and leak inside, causing permanent damage.
- Battery contacts may be wiped with a dry, lint-free cloth.

5.2 Talk Range

These radios can communicate at distances of up to 5 miles. But range will decrease as the surroundings become more obstructive. Buildings and vehicles as well as trees and heavy foliage will limit range.

<u>Radio Range</u>	<u>VHF</u>	<u>UHF</u>
Maximum Range		
Outdoor (Flat ground with no obstructions)	Up to 5 miles	Up to 5 miles
Medium Range		
Outdoor (Near residential buildings)	Up to 2 miles	Up to 2 miles
Minimum Range		
Indoor (Steel and concrete reinforced buildings)	Up to 150,000 sq. ft.	Up to 250,000 sq. ft.
Indoor (Multi-level buildings)	Up to 8 floors	Up to 20 floors

Note: The talk ranges above are averages based on field study using two-watt radios. Actual radio range may vary.

Appendix: Frequency and Code Tables

Radio Frequencies

UHF models

Frequency Number	Frequency MHz	Frequency Color
1	464.5000	Brown
2	464.5500	Yellow
3	467.7625	J
4	467.8125	K
5	467.8500	Silver Star
6	467.8750	Gold Star
7	467.9000	Red Star
8	467.9250	Blue Star

VHF models

Frequency Number	Frequency MHz	Frequency Color
1	151.6250	Red
2	151.9550	Purple
3	154.5700	Blue
4	154.6000	Green

Your UHF radio is preset to these frequencies:

Channel 1: Frequency 2

Channel 2: Frequency 8

Channel 3: Frequency 5

Channel 4: Frequency 6

Your VHF radio is preset to these frequencies:

Channel 1: Frequency 3

Channel 2: Frequency 4

Channel 3: Frequency 1

Channel 4: Frequency 2

New FCC licensees should not use frequencies 467.7625 MHz (J) and 467.8125 MHz (K). Call 1-888-225-5322 with your questions; that's the toll-free number for the FCC's National Call Center.

SPIRIT M-SERIES 2-WAY RADIOS

To program other Spirit radios to the same frequency or frequencies as your radio, use the tables below to match frequency settings.

1-Channel UHF models

Frequency MHz	Color	DIP-switch positions			
		S1	S2	S3	S4
464.5000	Brown	Off	Off	On	On
464.5500	Yellow	On	On	Off	Off
467.7625	J	On	On	On	On
467.8125	K	Off	Off	Off	Off
467.8500	Silver Star	On	On	On	Off
467.8750	Gold Star	Off	Off	Off	On
467.9000	Red Star	On	Off	Off	Off
467.9250	Blue Star	Off	On	On	On

1-Channel VHF models

Frequency MHz	Color	DIP-switch positions			
		S1	S2	S3	S4
151.6250	Red	On	On	Off	Off
151.9550	Purple	Off	Off	On	On
154.5700	Blue	Off	Off	Off	Off
154.6000	Green	On	On	On	On

2-Channel VHF models

Channel 1		Channel 2		DIP-switch positions			
Freq. MHz	Color	Freq. MHz	Color	S1	S2	S3	S4
151.6250	Red	154.6000	Green	Off	Off	Off	Off
151.6250	Red	154.5700	Blue	Off	On	Off	Off
151.6250	Red	151.9550	Purple	Off	Off	On	Off
154.6000	Green	154.5700	Blue	Off	On	On	Off

2-Channel UHF models

Channel 1		Channel 2		DIP-switch positions			
Freq. MHz	Color	Freq. MHz	Color	S1	S2	S3	S4
464.5500	Yellow	464.5000	Brown	Off	Off	Off	Off
467.7625	J	464.5000	Brown	Off	On	Off	Off
464.5500	Yellow	467.8125	K	Off	Off	On	Off
467.7625	J	467.8125	K	Off	On	On	Off
467.8500	Silver	467.8125	K	Off	Off	Off	On
464.5500	Yellow	467.9250	Blue Star	Off	On	Off	On
467.7625	J	467.9250	Blue Star	Off	Off	On	On
467.8500	Silver	467.9250	Blue Star	Off	On	On	On

Code Table

The code table is shown on the next page. Your radio is preset to code 29.

When reading the table, keep these keys in mind:

D = Down **N/A** = Not Available

U = Up **X** = Either Up or Down

None = Interference eliminator code is off. This lets you monitor all activity on the channel you are using.

SPIRIT M-SERIES 2-WAY RADIOS

Spirit Radio		Other Spirit Radios									
Code No.	Freq. Hz	Code No.	Freq. Hz	DIP-switch position							
				S1	S2	S3	S4	S5	S6	S7	S8
1	67.0	XZ	67.0	D	D	D	D	D	D	U	U
2	71.9	XA	71.9	U	D	D	D	D	D	U	U
3	74.4	WA	74.4	D	D	D	D	D	U	U	U
4	77.0	XB	77.0	U	U	D	D	D	D	U	U
5	79.7	WB	79.7	D	D	D	D	U	D	U	U
6	82.5	YZ	82.5	U	D	D	D	D	U	U	U
7	85.4	YA	85.4	D	D	D	D	U	U	U	U
8	88.5	YB	88.5	U	U	D	D	D	U	U	U
9	91.5	ZZ	91.5	D	D	D	U	D	D	U	U
10	94.8	ZA	94.8	U	D	D	D	U	D	U	U
11	97.4	ZB	97.4	D	D	D	U	D	U	U	U
12	100.0	1Z	100.0	U	U	D	D	U	D	U	U
13	103.5	1A	103.5	U	D	D	D	U	U	U	U
14	107.2	1B	107.2	U	U	D	D	U	U	U	U
15	110.9	2Z	110.9	U	D	D	U	D	D	U	U
16	114.8	2A	114.8	U	U	D	U	D	D	U	U
17	118.8	2B	118.8	U	D	D	U	D	U	U	U
18	123.0	3Z	123.0	U	U	D	U	D	U	U	U
19	127.3	3A	127.3	U	D	D	U	U	D	U	U
20	131.8	3B	131.8	U	U	D	U	U	D	U	U
21	136.5	4Z	136.5	U	D	D	U	U	U	U	U
22	141.3	4A	141.3	U	U	D	U	U	U	U	U
23	146.2	4B	146.2	U	D	U	D	D	D	U	U
24	151.4	5Z	151.4	U	U	U	D	D	D	U	U
25	156.7	5A	156.7	U	D	U	D	D	U	U	U
26	162.2	5B	162.2	U	U	U	D	D	U	U	U
27	167.9	6Z	167.9	U	D	U	D	U	D	U	U
28	173.8	6A	173.8	U	U	U	D	U	D	U	U
29	179.9	6B	179.9	U	D	U	D	U	U	U	U
30	186.2	7Z	186.2	U	U	U	D	U	U	U	U
31	192.8	7A	192.8	U	D	U	U	D	D	U	U
32	203.5	M1	203.5	U	U	U	U	D	D	U	U
33	210.7	M2	210.7	U	D	U	U	D	U	U	U
34	218.1	M3	218.1	U	U	U	U	D	U	U	U
35	225.7	M4	225.7	U	D	U	U	U	D	U	U
36	233.6	M5	233.6	U	U	U	U	U	D	U	U
37	241.8	M6	241.8	U	D	U	U	U	U	U	U
38	250.3	M7	250.3	U	U	U	U	U	U	U	U
Off	None	—	None	X	X	X	X	X	X	X	D



© Copyright 1998. Black Box Corporation. All rights reserved.

1000 Park Drive • Lawrence, PA 15055-1018 • 724-746-5500 • Fax 724-746-0746